
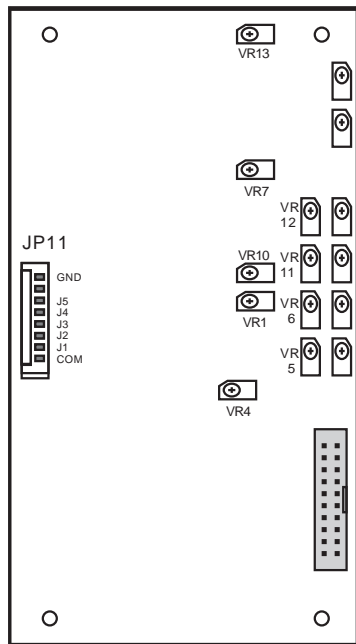
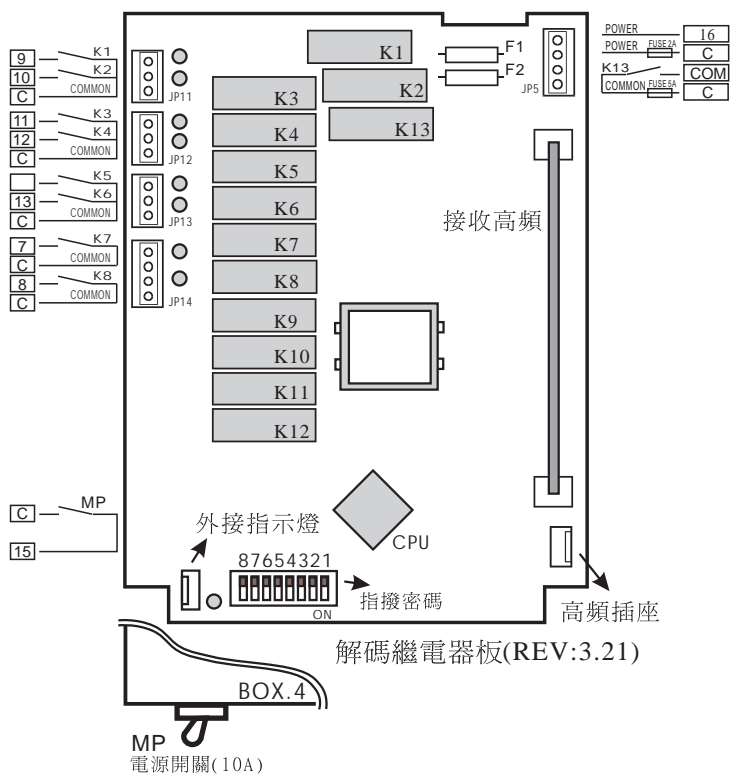


16P快速接頭線號(母型)

1. J1	9. R1
2. J2	10. R2
3. J3	11. R3
4. J4	12. R4
5. J5	13. ID
6.	14. COM
7. AUX.1	15. DC-24V (+)
8. AUX.2	16. DC-24V (-)


DANFOSS專用
比例擴充繼電器板

16P快速接頭(母型)

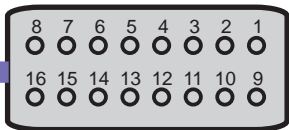


F1 2A 電源保險絲
F2 5A (Main)急停保險絲
R1/R2/R3/R4 為主動接點開關
K13 Main

油壓閥接頭

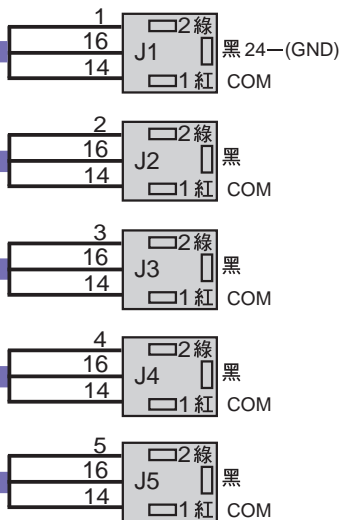

電源鎖匙

發射器示意圖

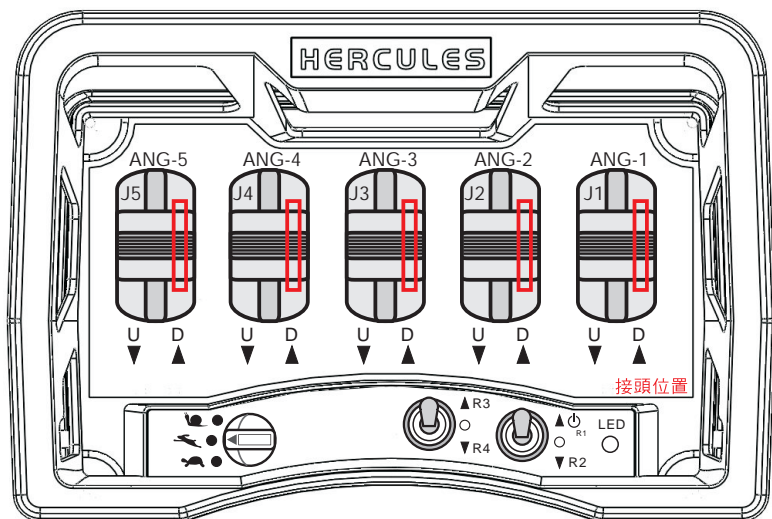

緊急停止

電源指示燈：正常操作時亮“綠燈”，低電壓時亮“紅燈”，請即更換電池。

